



SC601

User Guide V5.


2016.09.09

EARLY VERSION 0.99

Index

SC601 Overview	3
1.IP Finder	4
2.Responsive Bootstrap	6
3.Login SC601 Web Server	7
4.Network Setup	8
5.Stream Server	10
6.Video Tuning	17
7.Encoder Setup	18
8.Volume Tuning	20
9.Record Stream	21
10.Firmware Update	22
11.Account Setup	23
12.Reset to Default	25
13.RS-485	26
Appendix	29


SC601 Overview

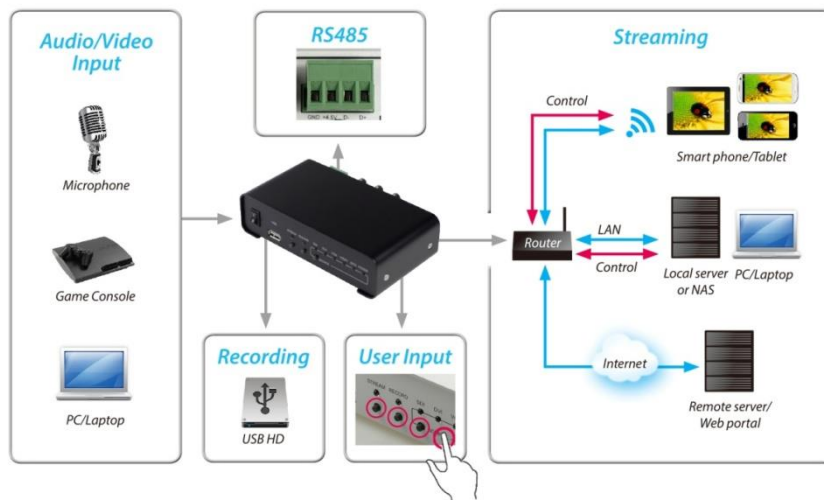

Item	Description
Input Interfaces	<ul style="list-style-type: none"> ● Video <ul style="list-style-type: none"> ■ 1x BNC for 3G / HD / SD-SDI ■ 1x HDMI, 1x DVI-I for DVI-D/HDMI and DVI-A/ VGA ■ 3xBNC for YPbPr/CVBS/S-Video ● Audio <ul style="list-style-type: none"> ■ 1xStereo audio through <ul style="list-style-type: none"> ◆ 1xRCA for Analog L/R audio ◆ SDI/HDMI/DVI-D embedded audio ◆ 1x3.5 mm phone jack
Video Feature	<ul style="list-style-type: none"> ● H.264/AVC , Main / High Profile ● Configurable bit rate up to 10Mbps ● Supported input /output resolutions <ul style="list-style-type: none"> ■ 1080@50p / 60p (1080p25 / 30p output) ■ 1080@50i / 59.94i / 60i ■ 720p@50p / 59.94p / 60p ■ 576@50p / 480@59.94p ■ 576@50i / <u>480@59.94i</u>
Audio Feature	<ul style="list-style-type: none"> ● AAC-LC ● Configurable bit rate range from 32Kbps to 384Kbps ● Sample rate : 48KHz, 16bit
Network Feature	<ul style="list-style-type: none"> ● 1x RJ45 for 10/100Mbps Ethernet ● DHCP client
Supported Streaming Protocol	<ul style="list-style-type: none"> ● TS over TCP/UDP (unicast & multicast) ● RTSP over HTTP/TCP/UDP (RTSP Elementary Stream) ● RTMP(Local & Publish) ● HLS
Misc. Features	<ul style="list-style-type: none"> ● RS-485 ● 1x USB 2.0 Host for USB storage ● Web UI for system configuration ● Firmware upgradable ● LED indicator ● Auto Signal Detection
Record Format	<ul style="list-style-type: none"> ● MP4 ● TS


1. IP Finder

- a. Make sure your computer and SC601 are in the *same Local Area Network.* (Make sure SC601 is connected to a Router not a Hub!!)
- b. Execute SC601 IP Finder.exe .

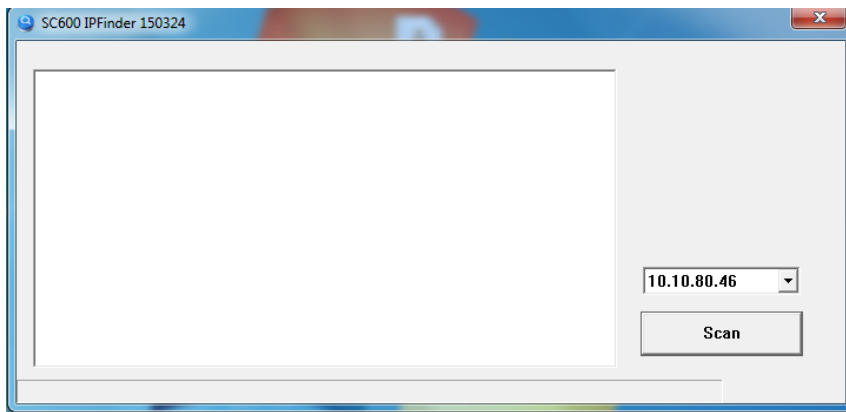

- i. If the network is available, local IP Address shows on (Pic 1.).


(Pic 1.)

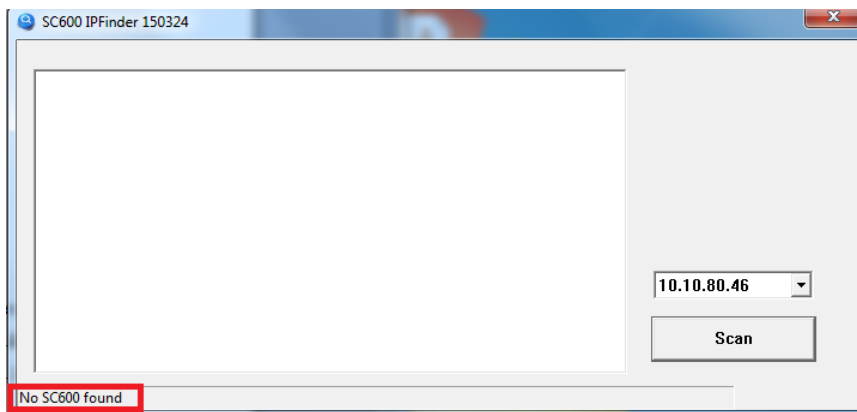

- ii. If the network is NOT available, shows on (Pic 2.).


(Pic 2.)

- c. Click “Scan”
- i. In scanning

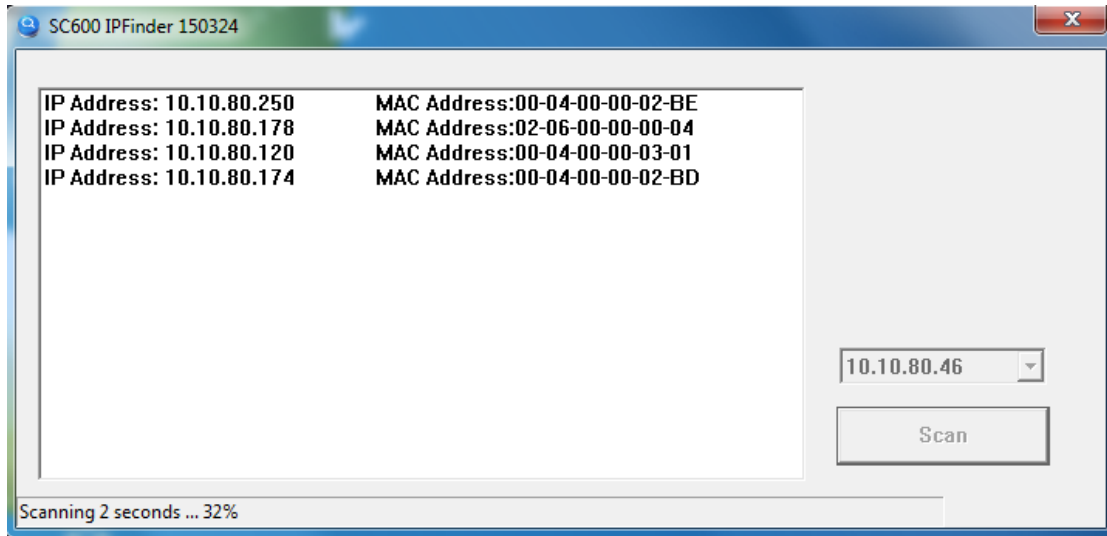

(Pic 3.)

- ii. Scan completed.

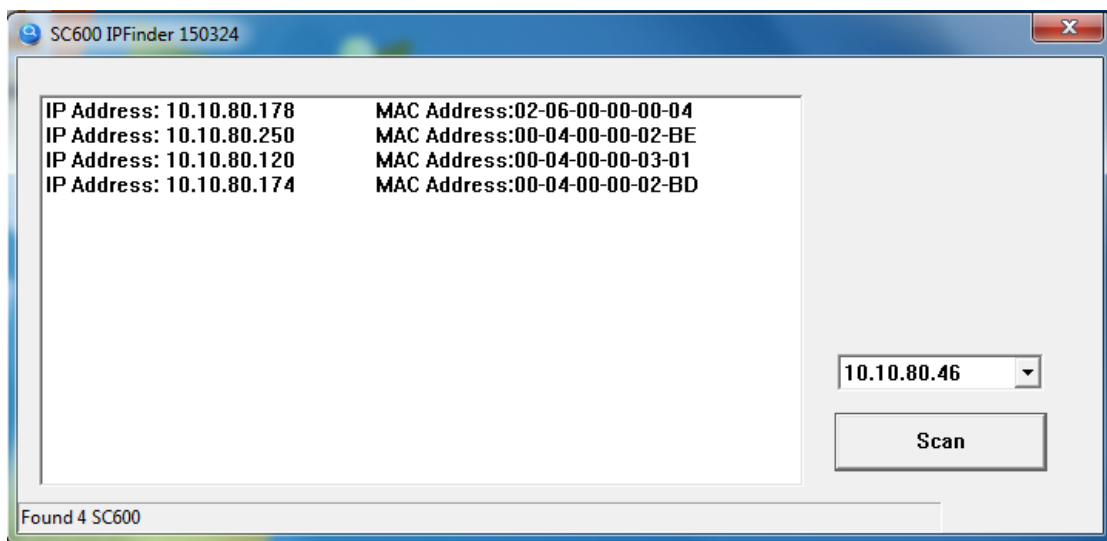


(Pic 4.)

SC601 default IP Address mode is dynamic by **DHCP**, you can set as static IP Address on Web Server.


(Tips:User can double click the column of IP address or MAC address, and the home page of stream server will be pop out on the default server.)

2. Responsive Bootstrap

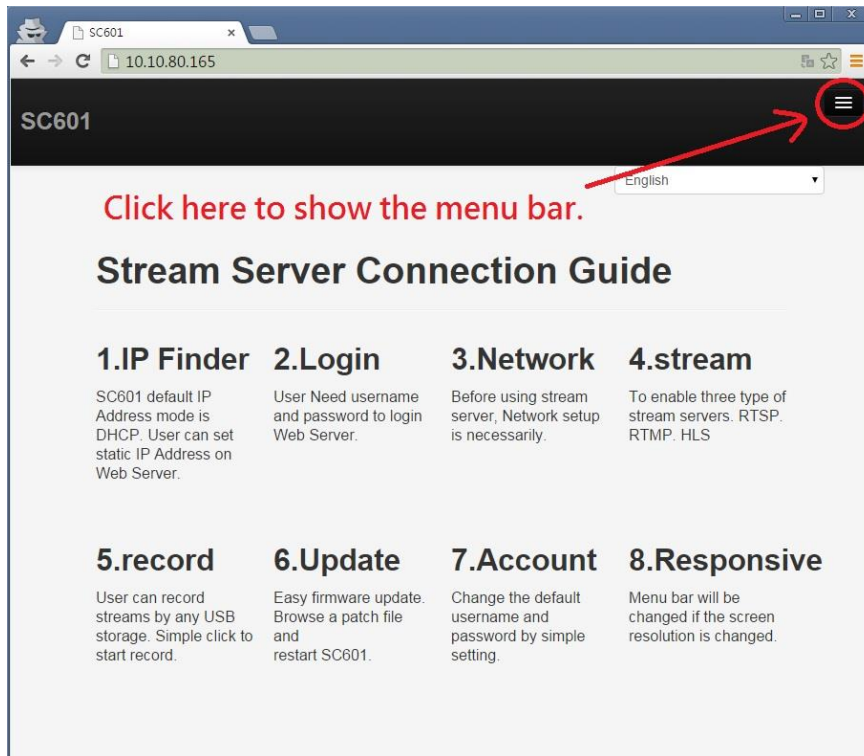

If the screen resolution of the browser is less than **1024x768**, the menu bar would be automatically hide to an icon in the upper of the right corner.

(Pic 5.)

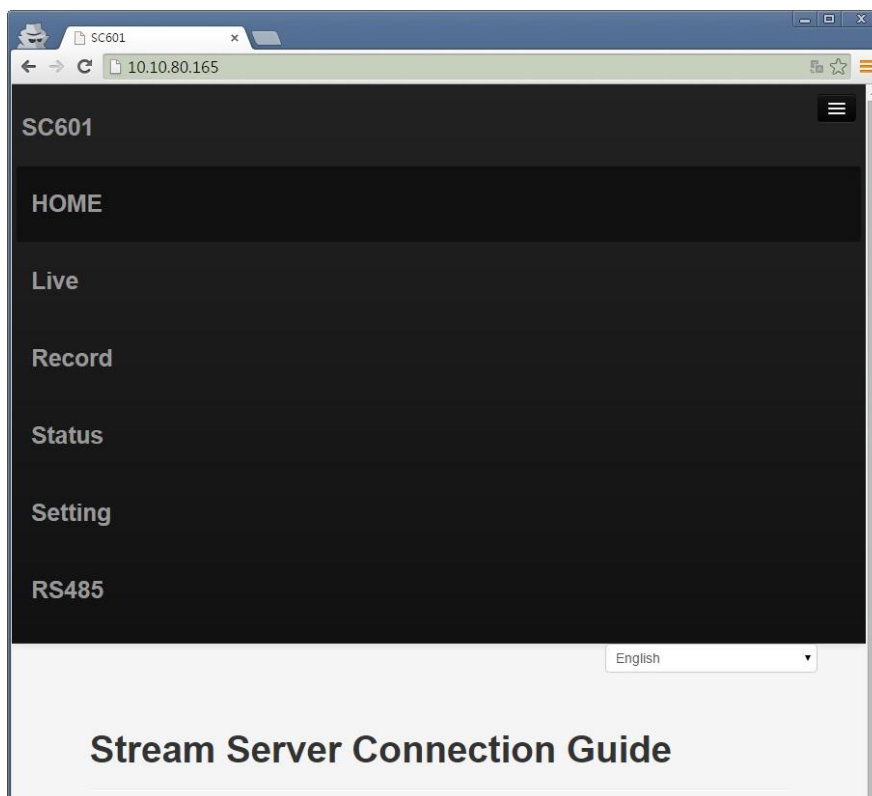

User can click the button to show the full menu bar. in the upper of the right corner .

(Pic 6.)

3. Login SC601 Web Server




(Pic 7.)

Before login to SC601 web server, user has to input Username and Password.

Username: admin Password:000000.

4. Network Setup

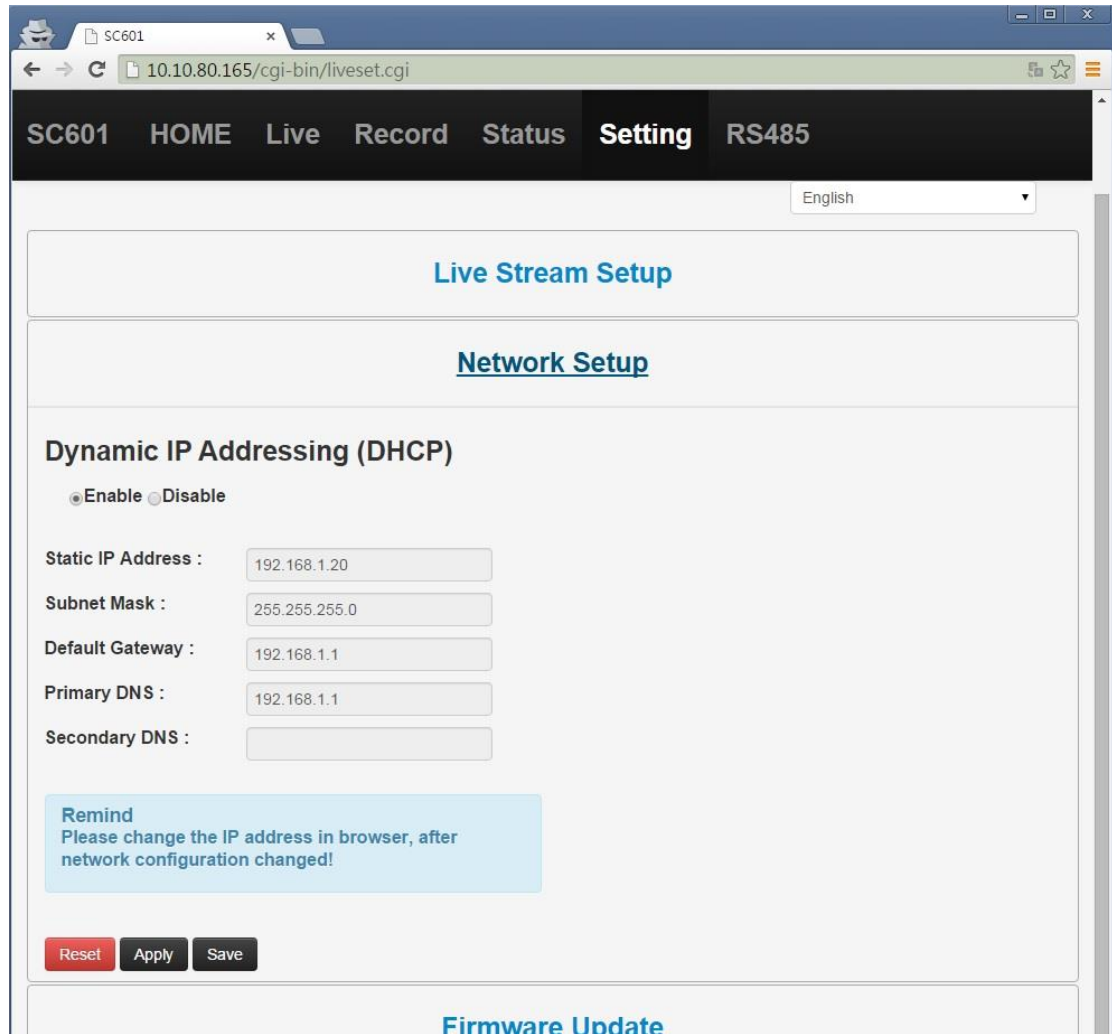


(Pic 8.)

Login Web Server and select **Setting** → **Network Setup**, as above.
There are two IP Address modes, **Dynamic (DHCP)** and **Static (fixed)**.

Save The button can save the network configuration.


Apply Click the button to show the configuration changed immediately but will not be saved.

Reset Clear all values of current input.

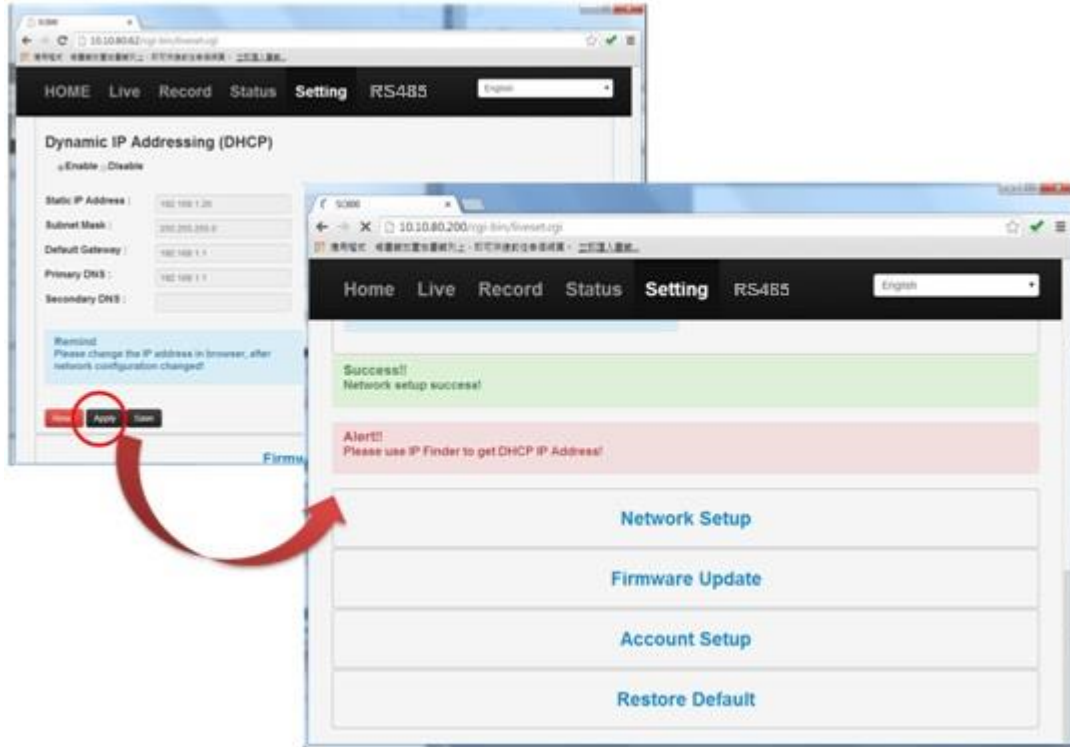

(Pic 9.)

After Enabling DHCP, please use IP Finder to get the dynamic IP address and login again.

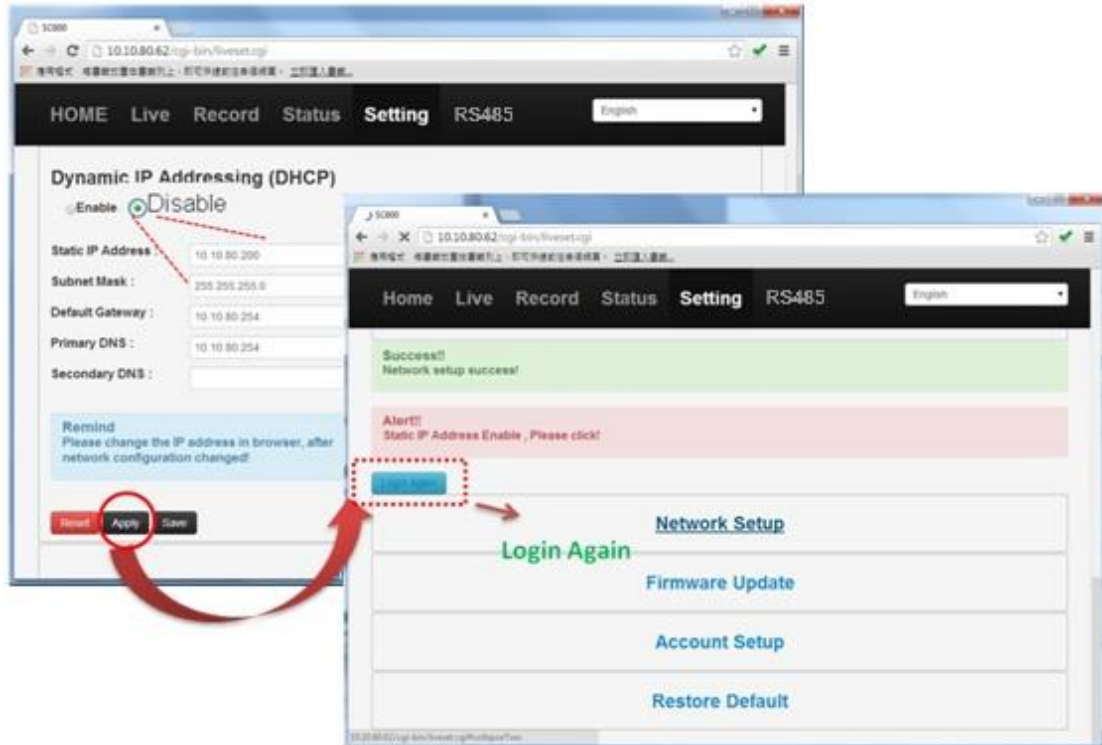


(Pic 10.)


After DHCP Disable, please click the button “**Login Again**” to login again.

5. Stream Server


General setting

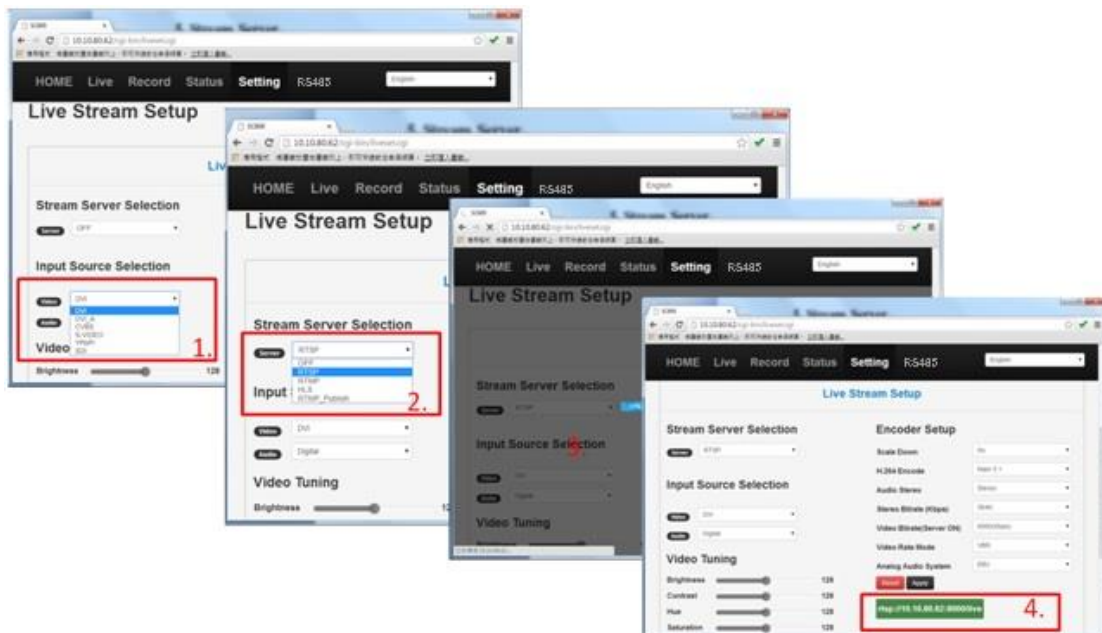


(Pic 11.)

1. Select source first. (HDMI, DVI, DVI_A, CVBS, S-Video, YPbPr, SDI)
2. Then select server and apply setting. (RTSP, RTMP, HLS, RTMP_Publish, RTSP_ES and Raw UDP)
3. Press the button of  and Loading.
4. The RTSP URL will be showed.


(Tips:HLS can only be streamed on the devices which are produced by Apple co.(EX: ipad , iphone)

(Tips: Press button of  to initial the status of Live Stream Setup.)

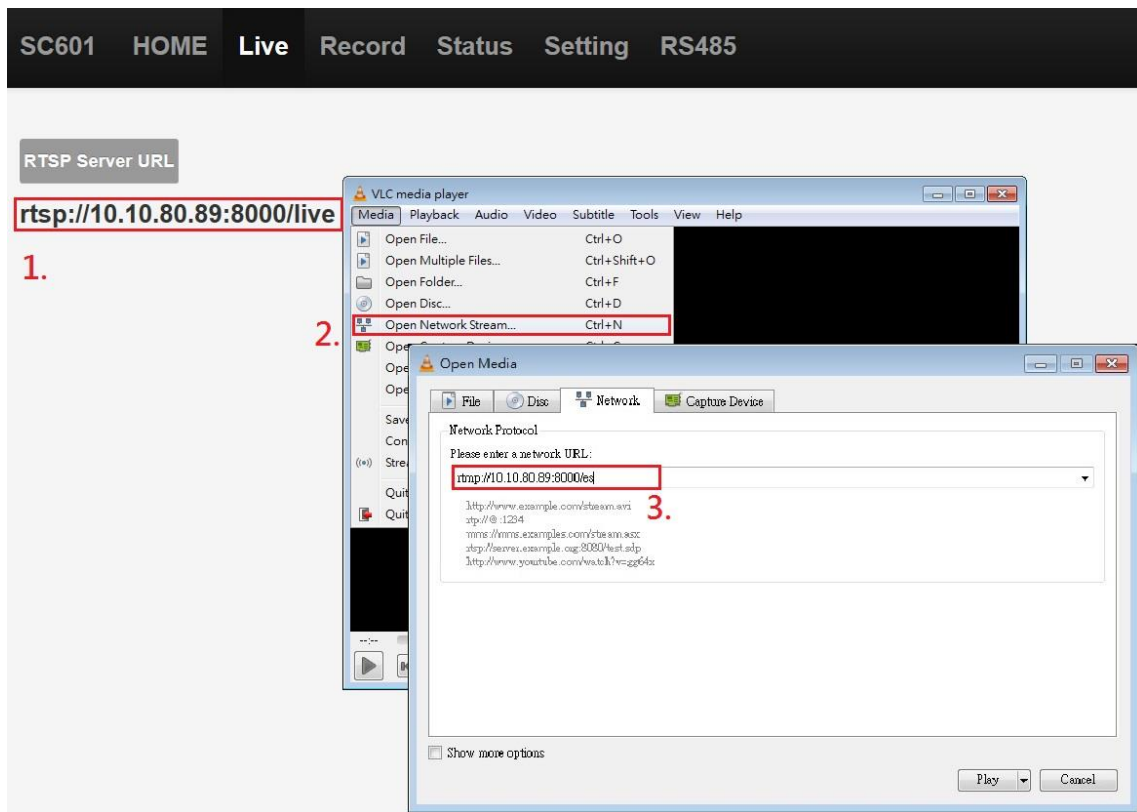


(Pic 12.)

1. After the server of RTSP has started, user can go to the RTSP address first.(Pic 12.)
2. Open VLC media player and follow the instruction.
3. Copy the RTSP URL to the column.
4. Play.

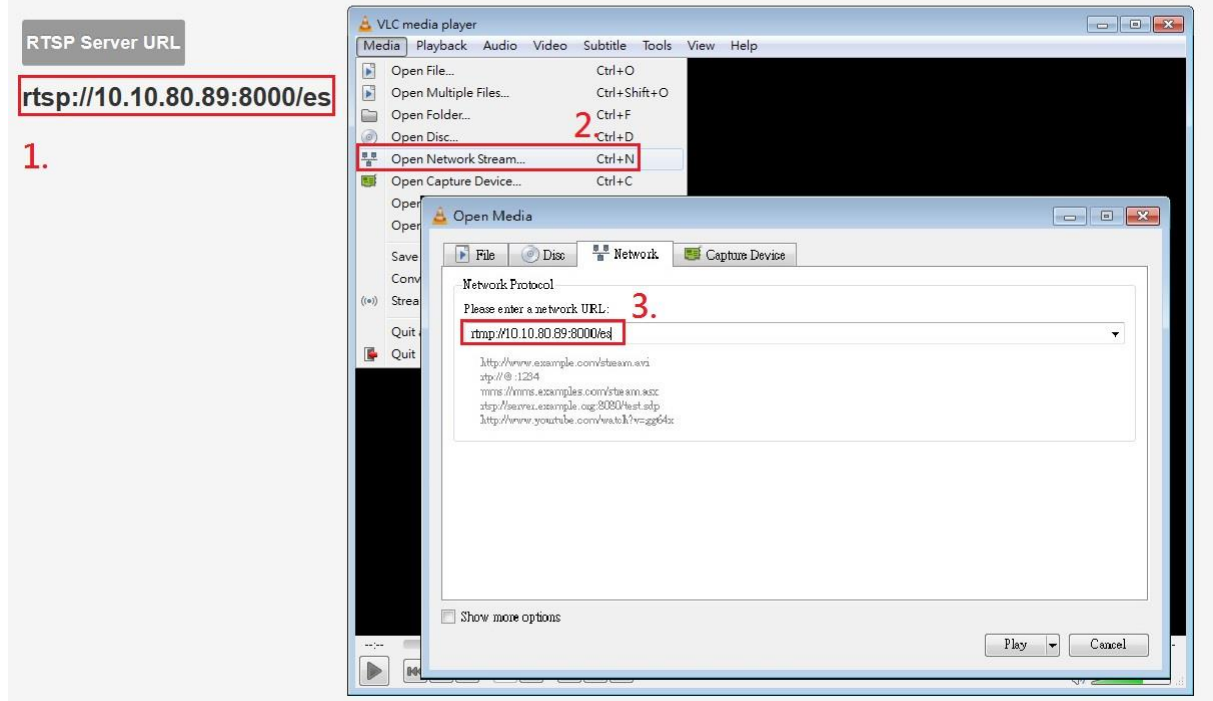

(Pic 12-1.)


1. After the server of RTSP_ES has started, user can go to the RTSP address first.(Pic 12-1.)
2. Open VLC media player and follow the instruction.
3. Copy the RTSP URL to the column.
4. Play.

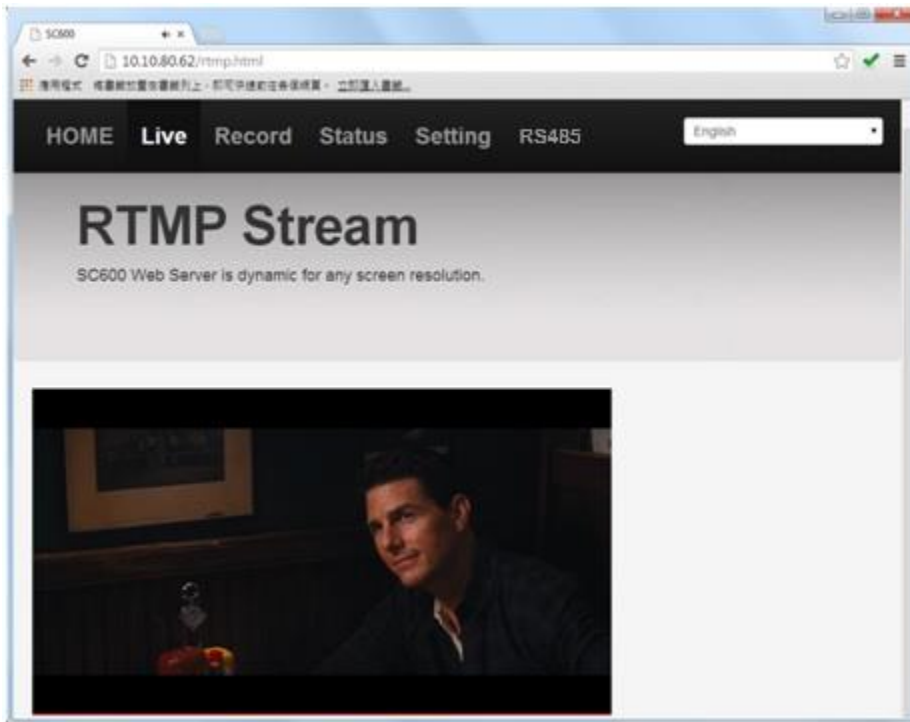

(Pic 13.)

1. The setting of RTMP is the same as“general setting”.(Pic 11.)
2. After stream server and source are running, go to the live page to watch the RTMP streaming.

RTMP Publish

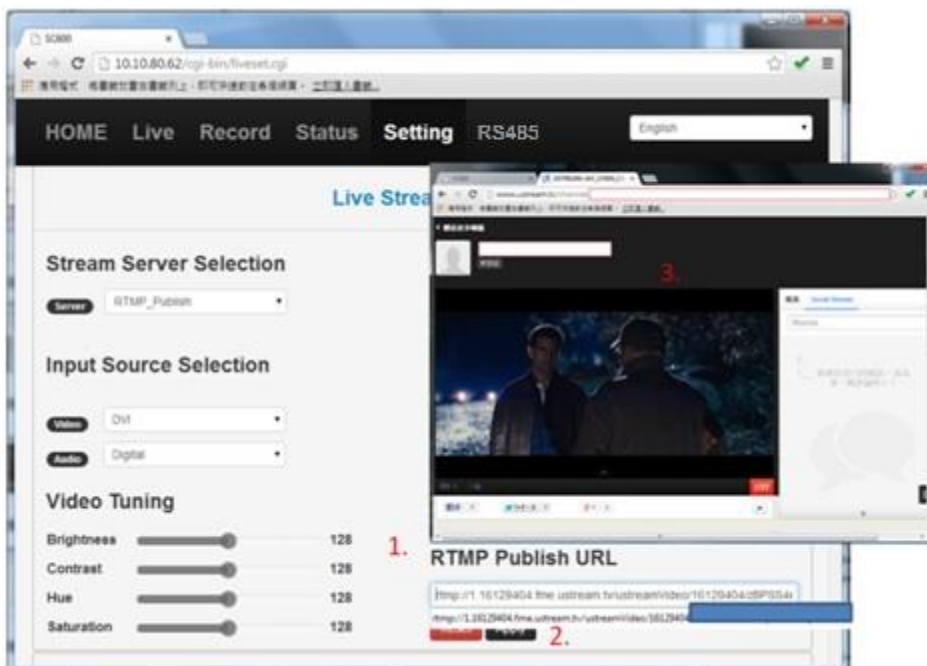

(Pic 14.)

1. If there is a RTMP Publish URL, the RTMP URL could be pasted into the correspond column.
2. Apply setting.
3. Go to Your channel and watch the live streaming.


RTMP Publish Authentication

The screenshot shows a control panel for RTMP publishing. It includes sections for:

- Stream Server Selection:** A dropdown menu set to 'RTMP_Publish'.
- Input Source Selection:** Video source set to 'DVI' and Audio source set to 'Digital'. An 'Auto Source Selection' checkbox is checked.
- Video Tuning:** Sliders for Brightness, Contrast, Hue, and Saturation, all set to 128.
- Volume Tuning:** A slider for Volume set to 100%.
- Encoder Setup:** A series of dropdown menus for Scale Down (No), H.264 Encode (Main 3.1), Audio Stereo (Stereo), Stereo Bitrate (Kbps) (384K), Video Bitrate (Server ON) (3000(Kbps)), Video Rate Mode (VBR), and Analog Audio System (EBU).
- RTMP Publish URL:** A section highlighted with a red border, containing a text input field with 'rtmp://...', input fields for 'RTMP Username' and 'RTMP Password', and 'Reset' and 'Apply' buttons.

(Pic 15.)



RTMP authentication is only valid on publishing to **Adobe Flash Media Server & Wowza Server**. User can set multiple sets of account information on Adobe Flash Media Server.

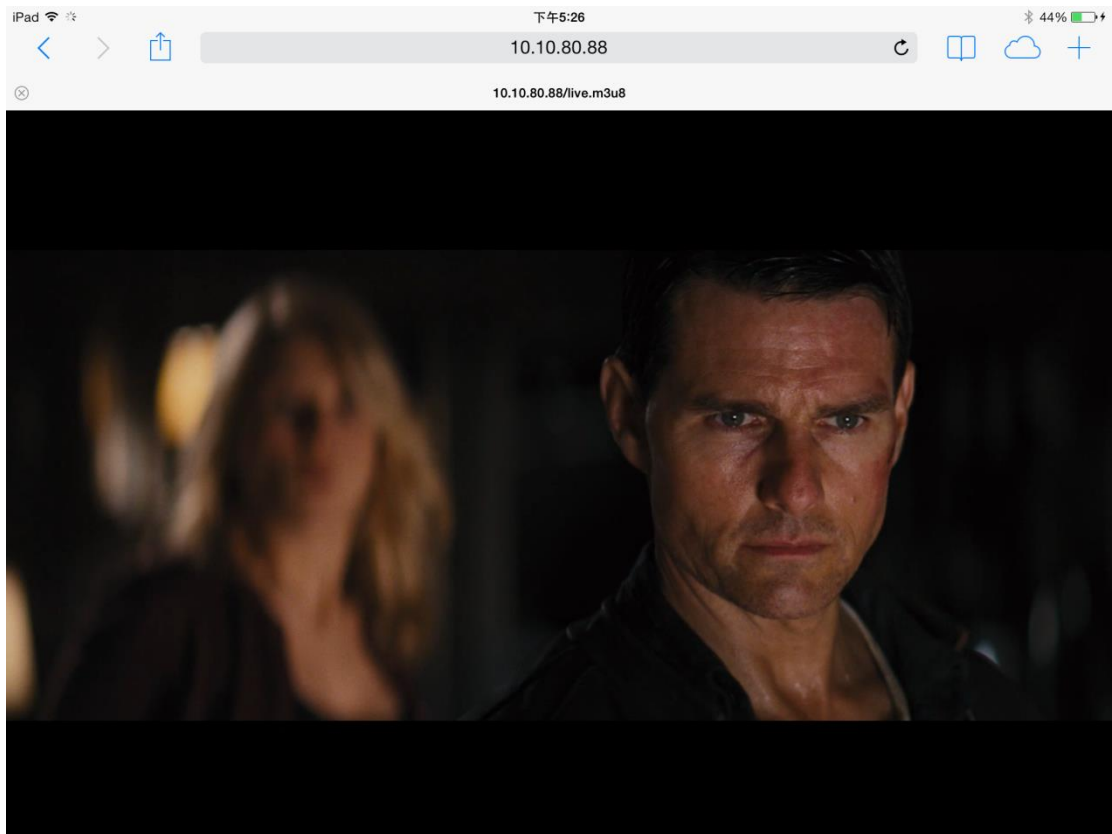


(Pic 16.)

For Apple devices, such as iPad or iPhone, login SC601 Web Server by Safari browser.


(Tips: SC601 support live streaming to the internet via "Wowza Server", "Adobe FMS", "Ustream", "Twitch", and "Youtube". The way of obtain steaming key can be found on the related website.)

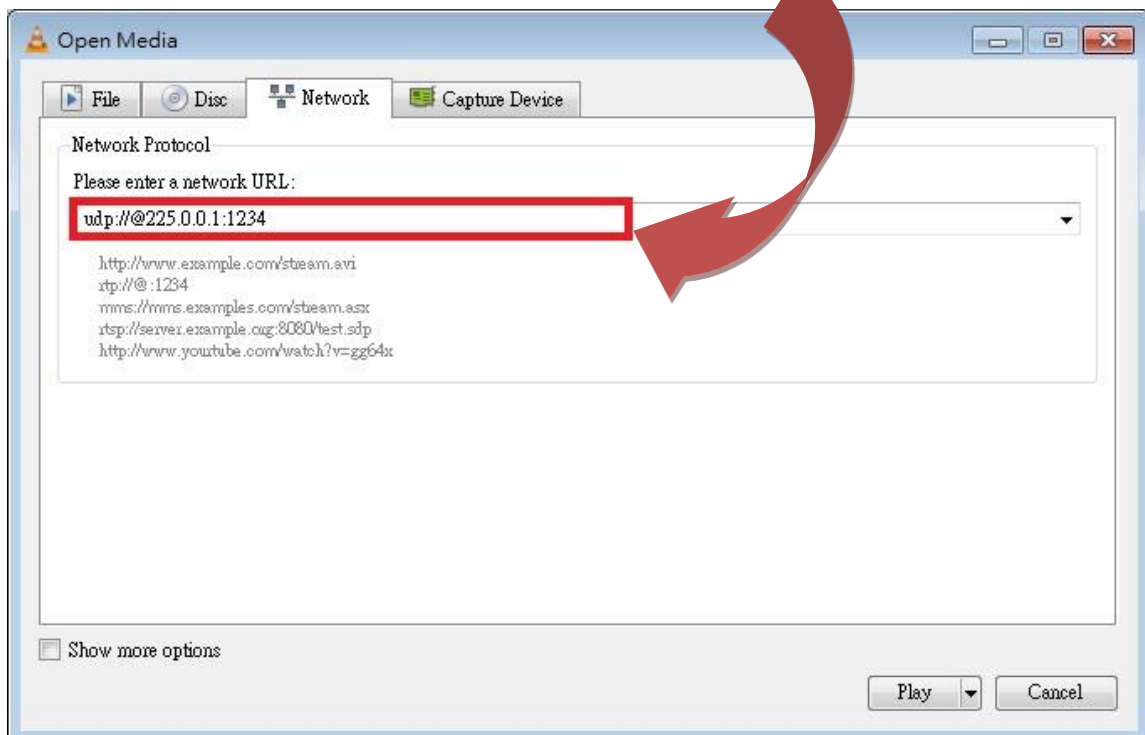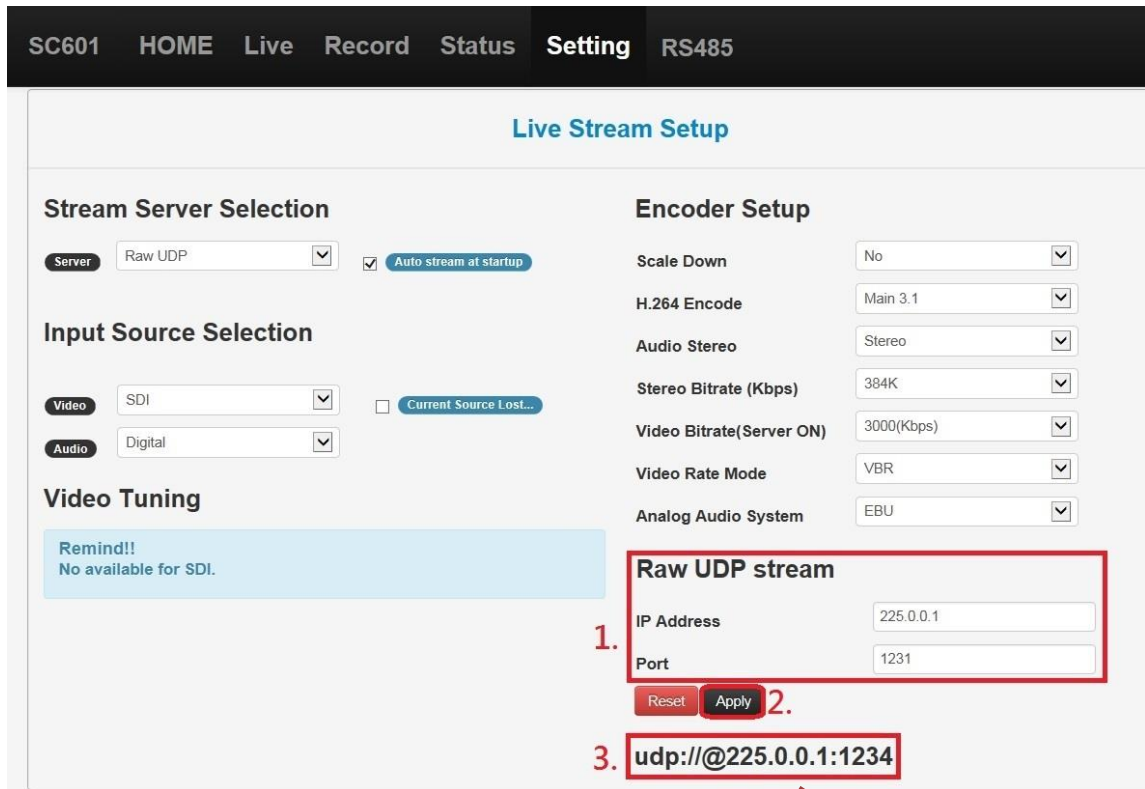

(Pic 16-1.)

1. Enter the IP address (in the range of 224.0.0.0 to 239.255.255.255) and Port number
2. Click 
3. Open VLC and follow the instruction

6. Video Tuning

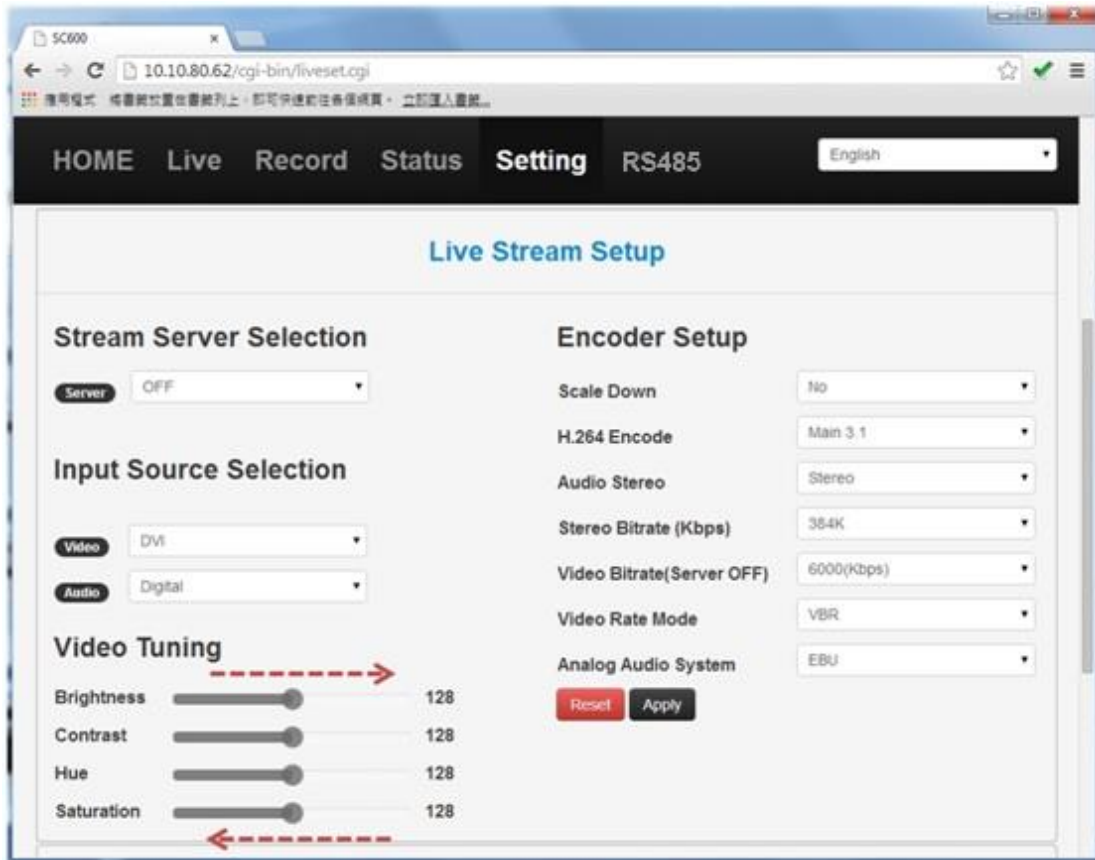


(Pic 17.)

User can adjust these parameters during watching live stream. The extra function of CVBS and S-Video is Sharpness. When user watch live stream and doing video tuning, the stream server would not be terminated or restart.

(Tips: There is no video tuning option in SDI input source.)

7. Encoder Setup

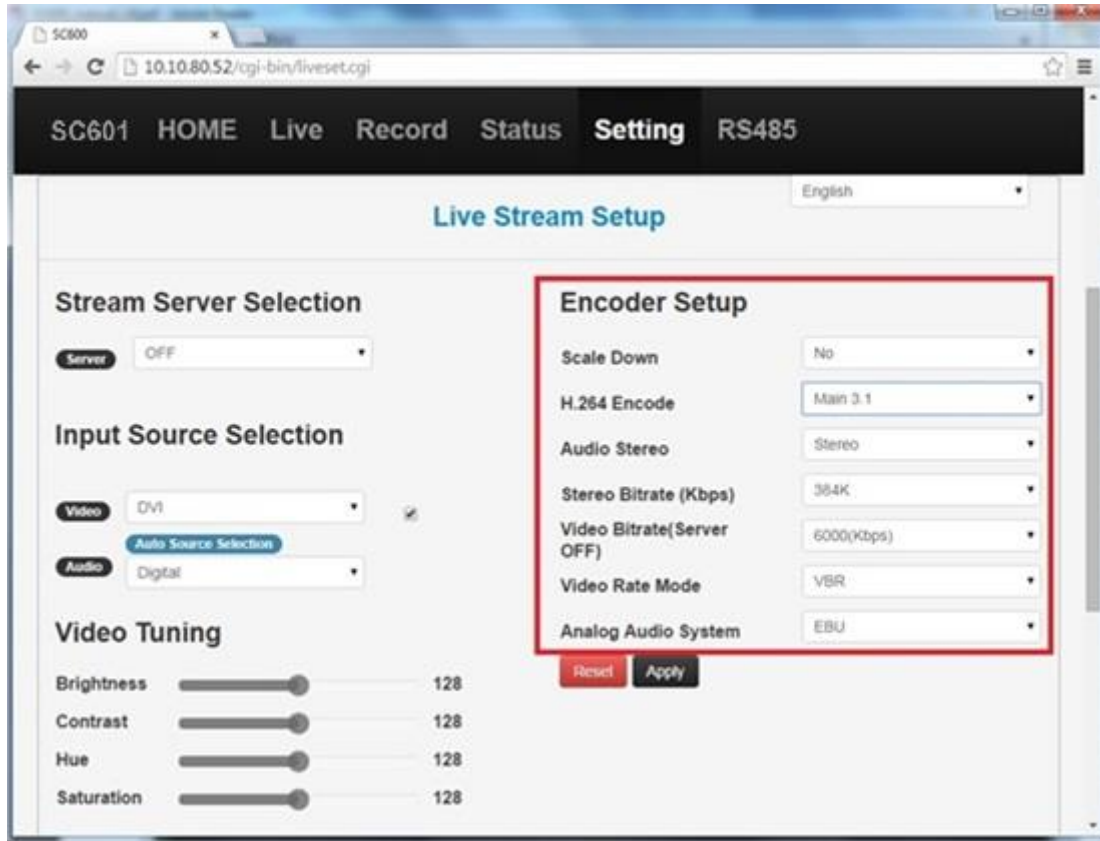

(Pic 18.)

1. Scale Down	(Table 2.)
2. H.264 Encoder:	Support Main3.0, Main3.1 and High4.0.
3. Audio Stereo:	Provide (Stereo) & (Mono).
4. Stereo Bitrate:	From 32(Kbps) to 384(Kbps).
5. Video Bitrate(Server OFF):	Record Only(bear). Up to 16000(Kbps)
Video Bitrate(Server ON):	Stream Only(bear). Up to 12000(Kbps). Record+stream: Up to 6000(Kbps).
6. Video Rate Mode:	VBR & CBR.
7. Audio Source:	Only HDMI and DVI and SDI Support Digital

8. Analog Audio System:	EBU & SMPTE。
-------------------------	--------------

(Table 1.)

(Tips: When video bitrates is higher than 6000kbps and doing recording at the same time, SC601 does not guarantee the quality in the status.)


***Scale Down**

Output Input	Output							
	1920x1080	1440x1080	1440x900	1280x720	960x540	720x576	720x480	320x240
1080p60 (to p30)	○	Down	Down	Down	Down	Down	Down	Down
1080i60	○	Down	Down	Down	Down	Down	Down	Down
1080p50 (to p25)	○	Down	Down	Down	Down	Down	Down	Down
1080i50	○	Down	Down	Down	Down	Down	Down	Down
720p60	N/A	N/A	N/A	○	Down	Down	Down	Down
720p50	N/A	N/A	N/A	○	Down	Down	Down	Down
576p60	N/A	N/A	N/A	N/A	N/A	○	Down	Down
480p60	N/A	N/A	N/A	N/A	N/A	N/A	○	Down

PAL (digital)	N/A	N/A	N/A	N/A	N/A	○	Down	Down
NTSC (ditital)	N/A	N/A	N/A	N/A	N/A	N/A	○	Down
PAL (analog)	N/A	N/A	N/A	N/A	N/A	○	Down	Down
NTSC (analog)	N/A	N/A	N/A	N/A	N/A	N/A	○	Down
		Original						
		Scaling down						
		N/A	(Not Allow)					

(Table 2.)


8. Volume Tuning

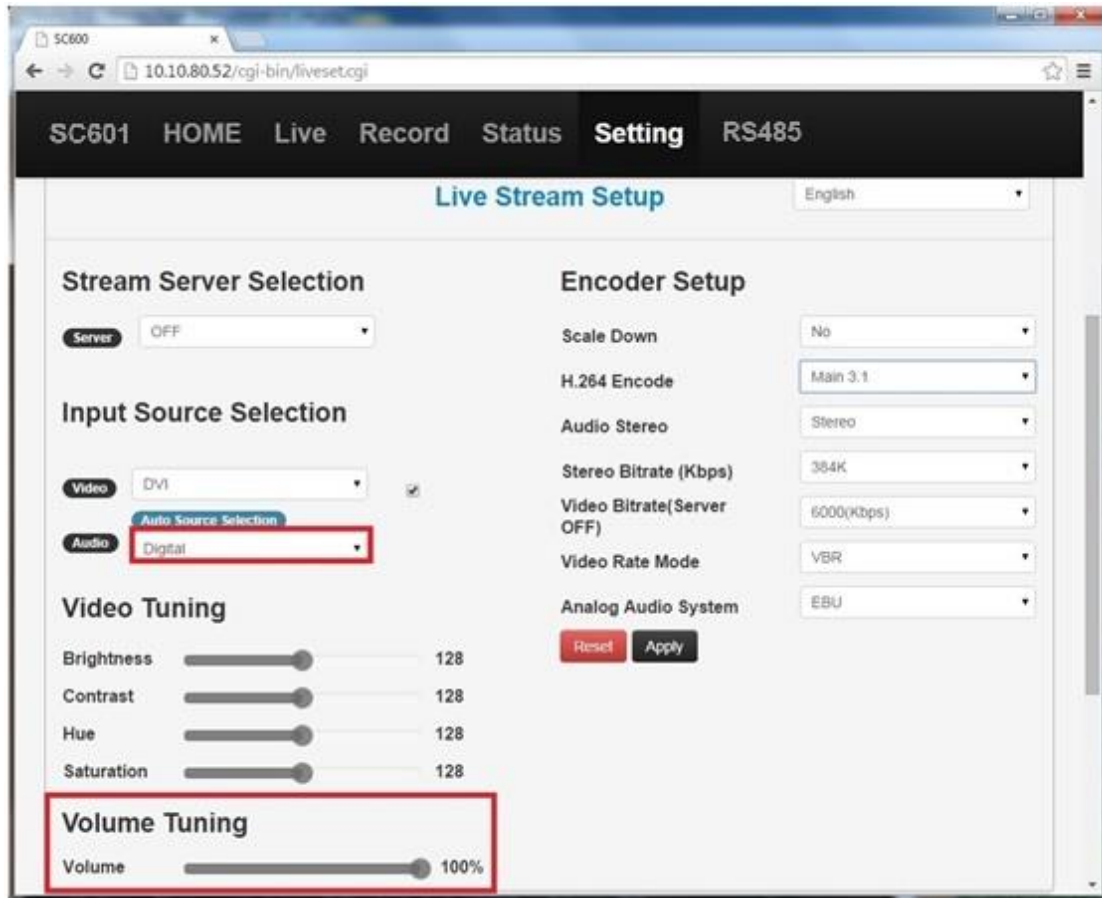

(Pic 19.)


User can adjust HDMI and DVI volume when audio source input is digital. The Volume can be down or up. Only digital source input is worked.

9. Record Stream

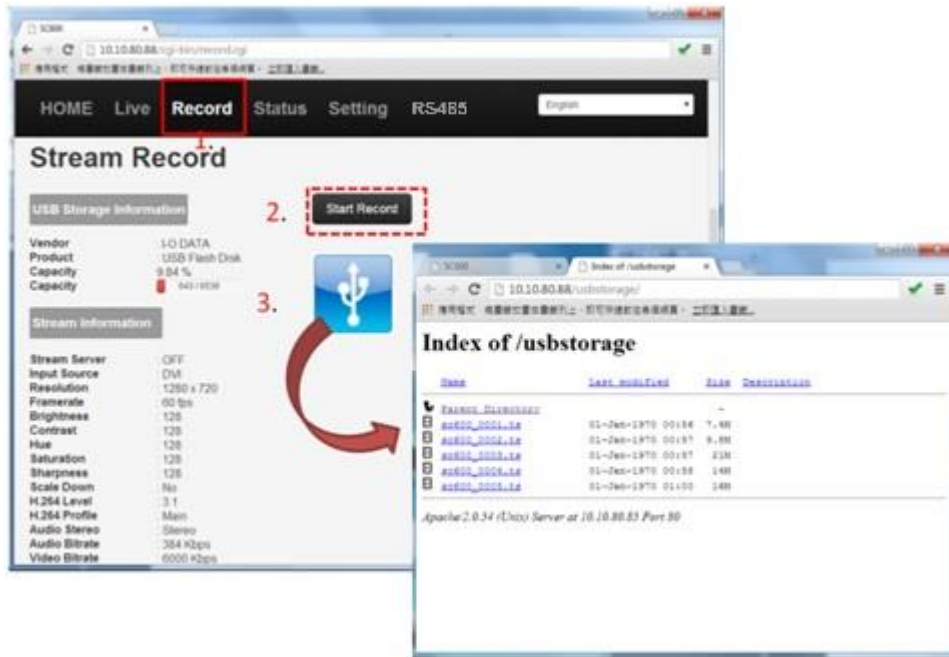

(Pic 22.)


1. Click Record button on the menu bar.
2. Start Record.
3. Click the picture of USB to see recording files in the USB storage.

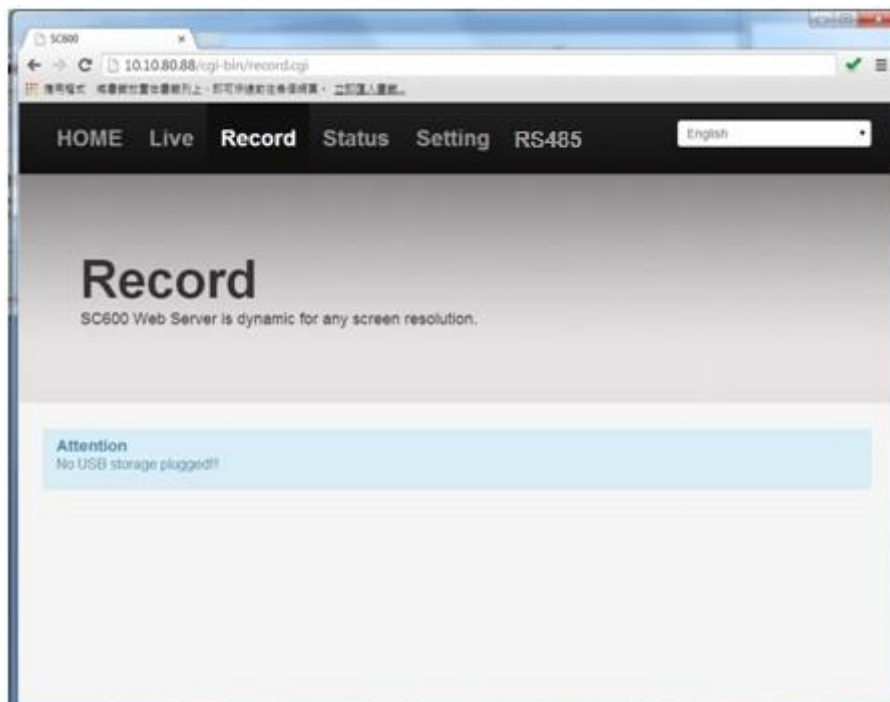

(Pic 23.)

If there is no USB Storage plugged-in, shows as above.

10. Firmware Update

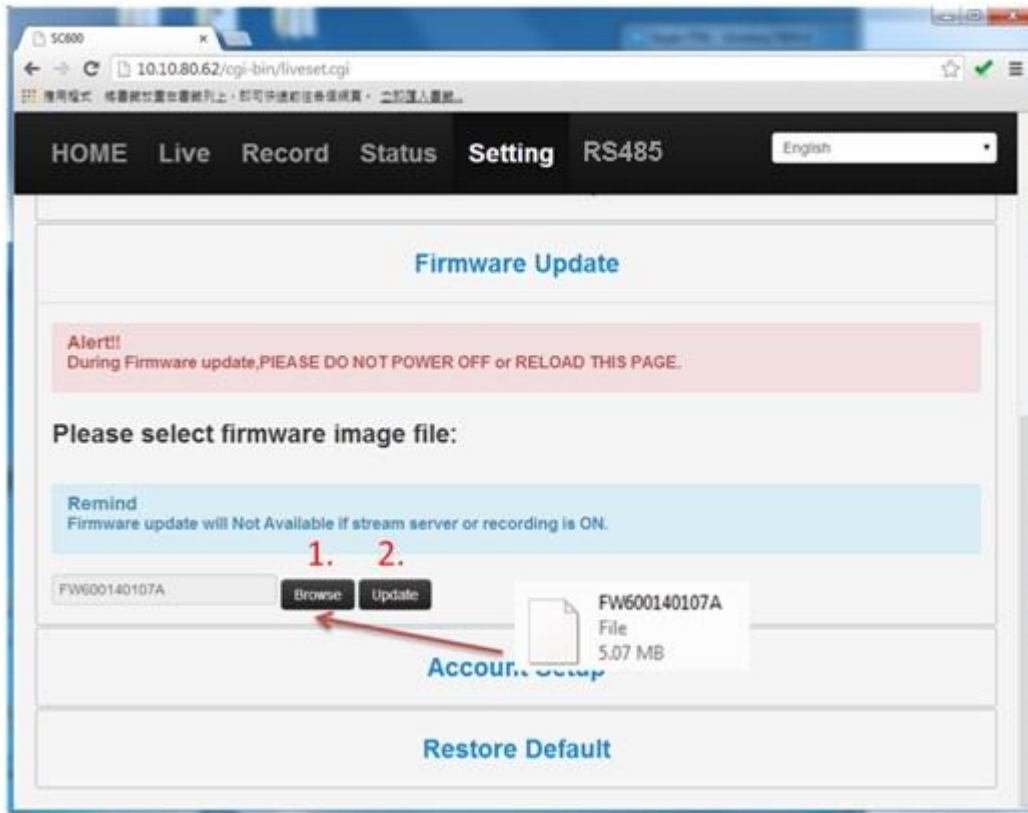


(Pic 24.)

1. Click Browse Button to find the newest SC601 firmware in your computer.
2. Update the Pack A and wait for the words of "update successful".
3. Then update the Pack B and wait for the words of "Please reboot"
4. After the firmware update is successful, **reboot SC601**.


(Tips: If there is no words of “**update successful**”, it is not allowed to update another pack or reboot machine.)

11. Account Setup

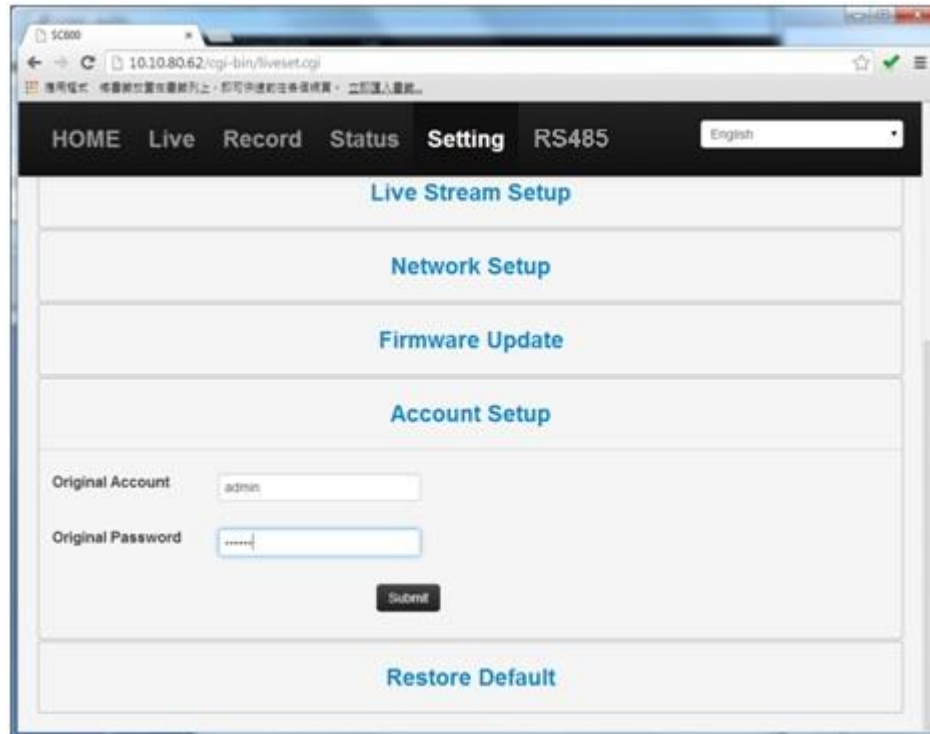

(Pic 25.)

Before setting a new username and password, user has to input the “original” username and password. If user never changes the account, user just types the **default** username and password. If user changed before, user has to type the last username and password setting to pass the verification.

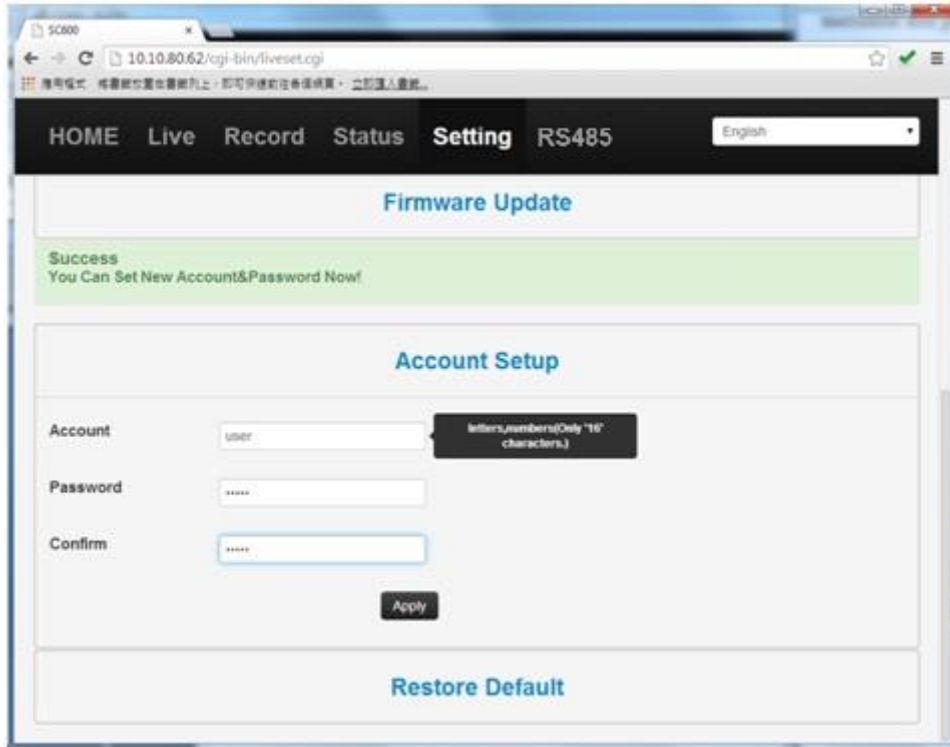


(Pic 26.)

Reset a newer username and password. Then apply change.

- If newer account information was forgot, we can use USB disk to do restoring.
- USB disk must be FAT32 format.

12. Reset to Default

I. Using Web Page

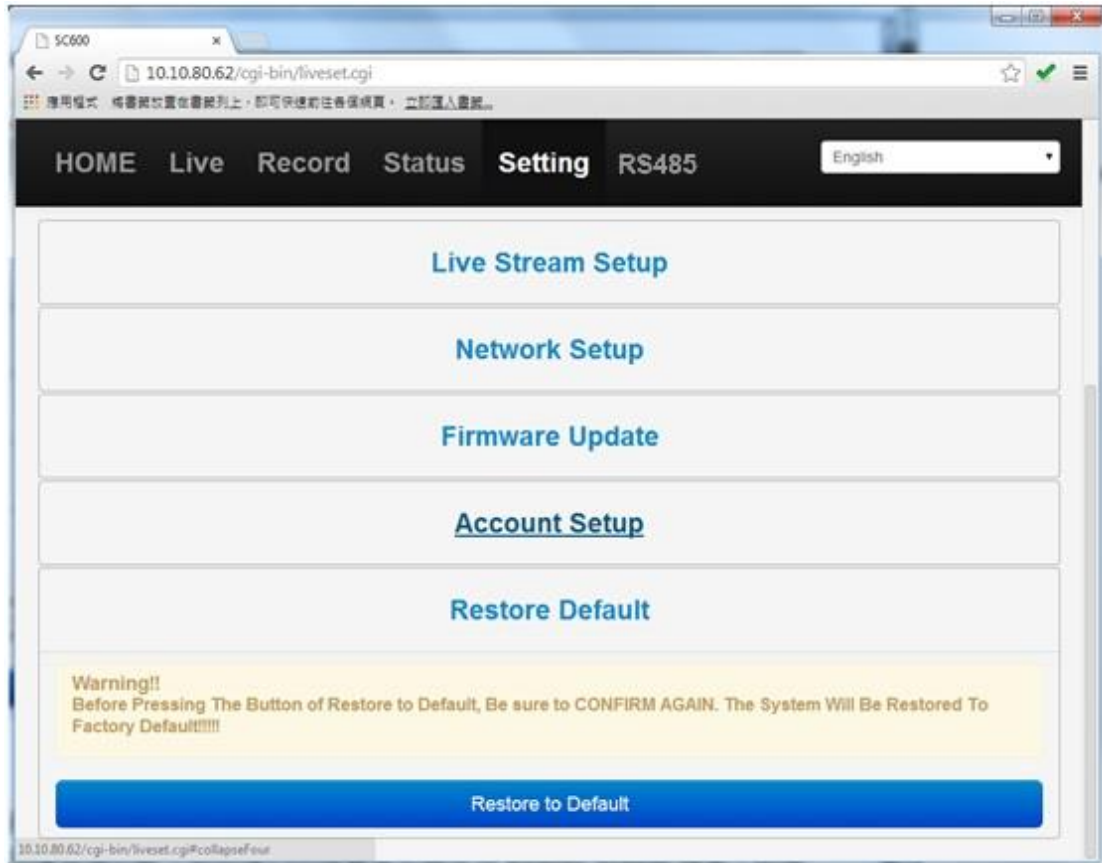

(Pic 27.)

If system is broken or boot fail, the function of "Restore to default" can help SC601 reset to the "Factory Default". If the function is also not work, user can try to use the File of "SC601_FACTORY_RESTORE" to restore SC601 by USB disk.

II. Using USB disk

1. Turn off SC601.

2. Connect USB disc which contain the File of "SC601_FACTORY_RESTORE".

(Note: USB disk must be FAT32 format.)

3. Turn on SC601.

13.RS485

I. Configure Serial Lines

SC601 HOME Live Record Status Setting **RS485**

English

RS485 Setup

BAUDRATE: 9600
DATA BITS: 8
STOP BITS: 2
PARITY: None

Apply Save Clear 01 02 03 04 05 06 07
08 09 10

Config1 Config2
Config3 Config4
Config5 Config6
Config7 Config8
Config9 Config10

Configure BAUDRATE, DATA BIT, STOP BITS and PARITY to correspond with serial lines.

The BAUDRATE can be set as following values: 50, 75, 110, 134, 150, 200, 300, 600, 1200, 1800, 2400, 4800, 9600, 19200, 38400, 115200

II. Save Configuration Files


1. Input Parametres.

NOTE: Each parameter must be within the range of **0~255** and separated by **Commas(,)**.

2. Choose which columns you want to save.

3. Click to save. If saving is successful, it will be showed below.

III. Apply Parameters

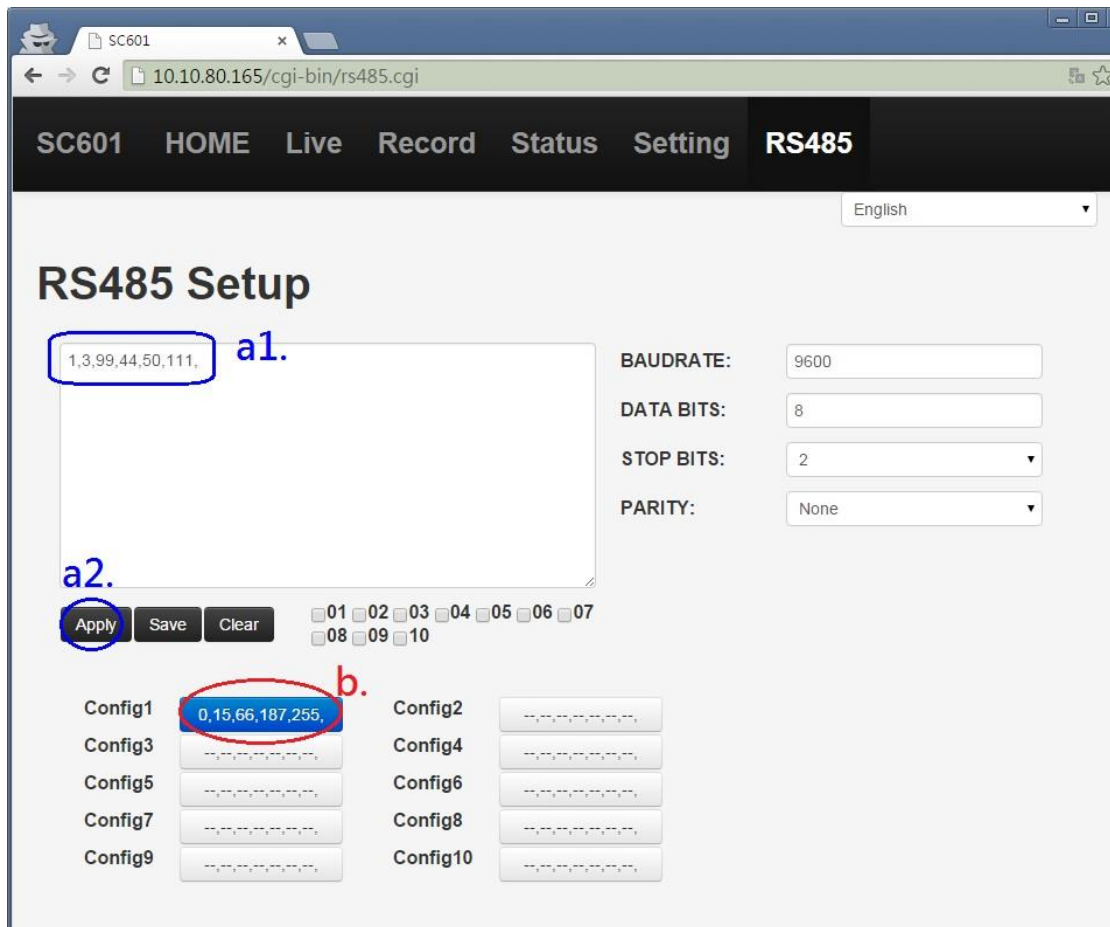

method a:

1. Input Parameters.
2. Click 

method b:

If you already save configuration files, you can click the blue button.(ex.

)

Appendix

1.Video Tuning

a. Value: 0 to 255

b. Video Tuning is available during streaming and recording.

	Brightness	Contrast	Hue	Saturation	Sharpness
HDMI	O	O	O	O	X
DVI	O	O	O	O	X
DVI_A	O	O	O	O	X
CVBS	O	O	O	O	O
S-VIDEO	O	O	O	O	O
YPbPr	O	O	O	O	X
SDI	X	X	X	X	X

2. Encoder setup

a. H.264 Encode	Up to Level 4.0
b. Audio Stereo	1. Stereo 2. Mono
c. Stereo Bitrate	Up to 384kbps
d. Mono Bitrate	Up to 192kbps
e. Video Bitrate	Record Only :Up to 16000Kbps. Stream Only :Up to 12000Kbps. Stream On + Recording : Up to 6000Kbps. (Over 6000Kbps Will not be Smooth!!)
f. Video Rate Mode	1. VBR(Variable Bit Rate) 2. CBR(Constant Bit Rate)
g. Analog Audio	i. HDMI 1. No 2. RCA 3. External RCA
	ii. DVI 1. No 2. RCA 3. External RCA
	iii. DVI_A 1. RCA 2. External RCA
	iv. CVBS 1. RCA 2. External RCA
	v. S-VIDEO 1. RCA 2. External RCA
	vi. YPbPr 1. RCA 2. External RCA
	vii. SDI 1. No 2. RCA 3. External RCA

3. LED Behavior

Source	Flash Red Light(HDMI): Booting Green Light: Signal Locked(Green/Red: S-Video, Green: CVBS) Red Light: No Signal Input
Record	Green Light: Video Recording
Streaming	Green Light: Video Streaming