

familywallpaper

YOUR CUSTOM WALLPAPER



Monteringsinstruktion

1

Före tapetsering

- Ta bort gammal tapet från väggen om den inte sitter fast ordentligt.
- Väggen skall vara tvättad, slät och torr.
- Säkerställ att väggen har en neutral färg.
- Vid starkt sugande underlag kan förlimning* på väggen vara nödvändigt.
- Använd ALLTID lim avsett för NON-WOVEN tapeter och läs instruktionen noga.
- Undvik höga temperaturer eller kraftigt drag under monteringsprocessen då det kan få en negativ inverkan på slutresultatet.

2

Montering av tapet

- Kontrollera att du fått det motiv som du beställt.
- Skär isär våderna enligt skärmarkeringarna. Lägg våderna bredvid varandra med mönstret uppåt så motivet framgår. Kontrollera att alla våder är med och att ingen våd är defekt eller skadad.
- Applicera Non-wovenlimmet jämt över ytan med en limroller direkt på väggen. Limma för maximalt 2 våder i taget. Var noga med att använda rätt mängd lim och att tillräckligt med lim finns under alla skarvar.
- Montera Non-woventapeten medan limmet fortfarande är vått.
- Non-woventapeter skall sättas kant-i-kant dvs. inget överlapp. Rikta in första våden med ett tapetlod. Undvik att lim kommer på framsidan på grund av missfärgningsrisk.
- Pressa ut alla luftblåsor noggrant med plastspackel


eller tapetborste från mitten mot kanterna.

- Eventuella limrester på tapeten tas omgående bort med en blöt tapetsvamp.
- Repetera för resten av våderna.
- Tryck till våden i hörnen mot golv och tak med en spackel eller metallinjal och skär av överlappen längs med verktygets kant med en vass tapetkniv.
- Låt torka ett dygn.

Vänligen notera:

- Våderna är tryckta som i exemplet.
- Varannan våd är upp och ned.
- Tag alltid professionell hjälp vid osäkerhet i samband med tapetseringen då vi inte kan ta ansvar för brister orsakade av handhavandefel.

*När du förlimmar använder du flödigt med utspätt tapetklistor och låter klistret torka innan du tapetserar.

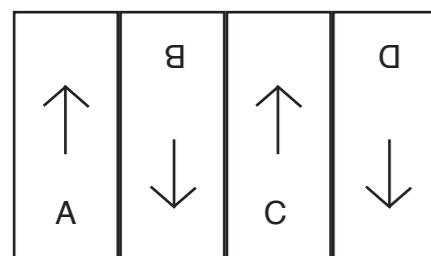


Step by step guide for hanging non-woven wallpaper

1

Preparation

- Remove any traces of dirt, loose wallpaper or flaking paint.
- Make sure the wall is clean, smooth and dry.
- The wall should be in a uniform color (preferably white or other light uniform color).
- Any particularly absorbent surface may need to be pre-glued with an initial layer of a weakened solution of the wallpaper adhesive.
- Always exclusively use adhesives compatible with non-woven wallpaper and follow the instructions carefully.
- Avoid overheating the room and eliminate any draft, as these factors may have a negative effect on the final result.

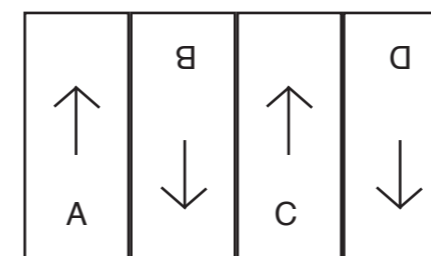

2

Applying wallpaper

- Verify that the image is as ordered.
- Cut the lengths at the predefined markings. Place the wallpaper pieces/lengths next to each other, with the image up, on the floor. Check that no pieces are missing and that they are undamaged.
- Covering a width of 2 lengths at a time, apply a thin even coat of adhesive onto the wall using a paint roller. Remove any excessive adhesive.
- It is important that the adhesive is still damp while the lengths are hung.
- Align the first length using a level. Use a papering tool to smooth out the wallpaper and remove any excessive adhesive and air bubbles (work from the ceiling to the floor and from the middle to the edges).
- If you get any adhesive on the front of the wallpaper, wipe it off immediately with a damp sponge.

- Continue with the next length, matching up the edges. Ensure that the lengths are properly positioned and that there is no surface visible at the joints. It is important that adhesive be applied right out to the edges to ensure that each length adheres to the wall properly.
- Repeat for the remaining lengths.
- Trim excess paper at ceiling and floor with a sharp knife. Preferably use a steel ruler or spatula for support when trimming the wallpaper. Replace the blade often, as a dull blade can easily tear the wallpaper.
- Leave to dry for 24 hours.

Please note:

- The lengths are printed as in the example.
- Every second length is upside down.
- Always take professional advice if in doubt during paper hanging as we can't take responsibility for any mistakes made in the process.