

## INSTALLATION


## **INSTRUCTIONS-A**

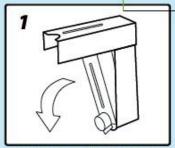


Open the back of the unit. Press on the button and pull on the front panel. Remove the refill container.

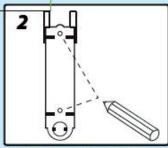


Put the unit in place. Hold the back plate against the wall and mark the location of the screw holes.

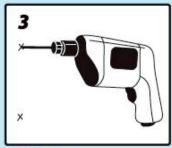


Drill the holes.

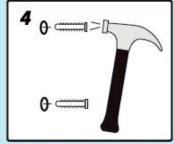

Use a hammer to help put in the wall plugs.

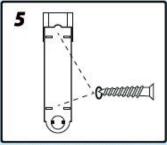


Place the unit against the wall. Screwinto position.

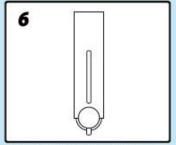


Reinsert refill container and close.


## **INSTRUCTIONS-B**

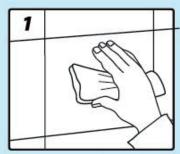


Clean the wall carefully (preferably with rubbing alcohol) and dry well.

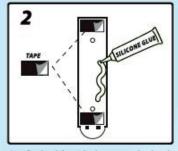

Apply double-sided tape to the back of the unit. Remove protective covering on tape.

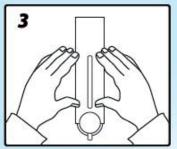

Make wavy lines of silicone on back of the dispenser where it will touch the wall. Please use all of the tube for maximum bond. Press firmly onto wall.

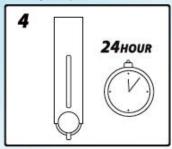

Hold in place for one minute. Do not fill container for 24 hours to allow the silicone time to fully dry.